REALTECH

SPYNET™

6+

JOIN THE NETWORK

Play games and gather intel on other SpyNet™ gadgets at:

SPYNETHQ.COM

SECRET AUDIO

RECORDING PEN

Tested To Comply With FCC Standards FOR HOME OR OFFICE USE

FC JAKKS Pacific, Inc. #18739

This is a REAL recording device! Record others, and upload/distribute recordings, only with the permissions of those recorded. Always play responsibly and respect others' privacy.

1 AAA Required
Not Included

JAKKS Pacific®

RECORDING PEN DIAGRAM

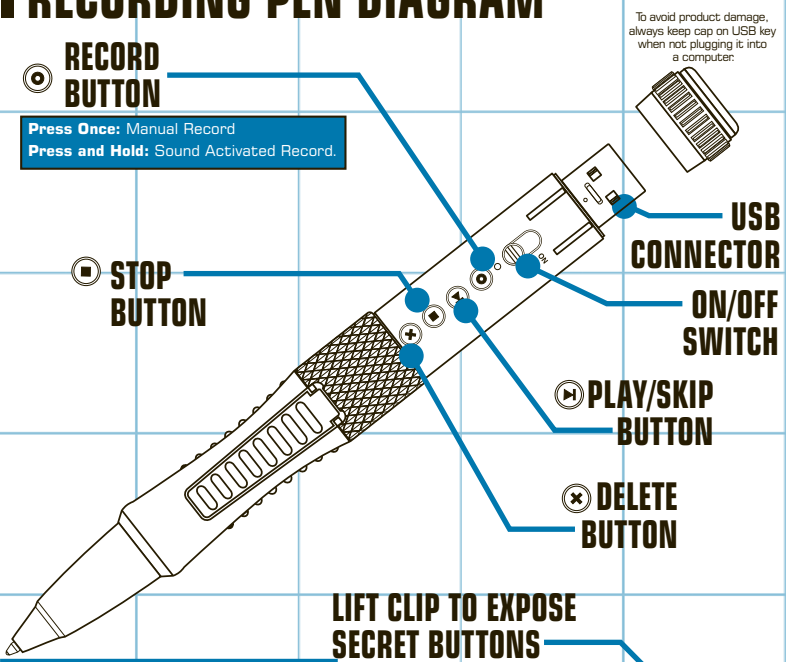
RECORD BUTTON
Press Once: Manual Record
Press and Hold: Sound Activated Record.
To avoid product damage, always keep cap on USB key when not plugging it into a computer.
USB CONNECTOR
ON/OFF SWITCH
STOP BUTTON
PLAY/SKIP BUTTON
DELETE BUTTON
CLIP ASSEMBLY
If the clip detaches, simply follow steps below.
1. Press one side of clip in first.
2. Snap other side of clip into place.
LIFT CLIP TO EXPOSE SECRET BUTTONS
50°
1.5V "AAA", LR03
DC 1.5V, 0.5W

FOR SET-UP: (ADULT INSTALLATION REQUIRED)

Requires 1 AAA (LR03) Alkaline Battery (not included)

Battery installation: Locate the battery compartment underneath the unit. Using a Phillips screwdriver, remove the screw and the battery door. Install a fresh battery, matching polarity icons with those on the unit. Replace the battery compartment and the screw.

When operating in environments that are subject to electrostatic discharges, the SpyNet™ Recording Pen may malfunction. If this occurs, the user should reset the unit by using the on/off switch.

Ever wish that you could record a conversation without the other person knowing about it? Well, with the Audio Spy Pen now you can! This sleek and compact pen has a recording device built inside, allowing you to both record and playback audio with the push of a button. You can even switch the pen to "Sound Activated" record mode, where the pen won't start recording until it detects sound. It's a perfect tool for gathering audio intel!

OPERATION INSTRUCTIONS

Make sure the pen has a fresh battery inside, and slide the switch to the "ON" position to activate it.

RECORD MODES

Manual Record Mode

Once the pen is active, press the RECORD button one time to begin recording an audio clip. The green light on the pen will light up and stay on while recording. Press the STOP button to end the recording. A "double-beep" sound during recording indicates that the pen is out of memory space for recording audio. To free up more space, delete an audio clip directly on the pen or via computer (see Deleting Audio).

RECORD MODE (CONTINUED)

■ **Sound Activated Record Mode**
Holding the ⊙ RECORD button for two seconds initiates the, "Sound Activated" record mode. The pen will start recording when it detects noise. The green light will start blinking when sound is detected. Press the ■ STOP key to stop recording.

PLAYING AUDIO CLIPS ⏯

Press the ⏯ PLAY key once to hear the most recently recorded audio clip and hold up to your ear. Pressing the ⏯ PLAY key again while a clip is playing will skip ahead and start playing the next clip (if no other audio clips are present on the pen, it will simply restart the current clip). Press the STOP key at any time to stop playing the current audio clip.

DELETING AUDIO ✖

While playing an audio clip, press the ✖ DELETE key during playback to erase from the pen's memory space. A double-beep sound indicates the clip is being erased. Once the audio clip is deleted, it is permanently erased and unrecoverable. Clips can be saved on SpyNet™ HQ for future use (see Uploading to SpyNet™ HQ).

UPLOADING TO SPYNET™ HQ

Remember to ask an adult first before using the computer.

■ Audio clips from the pen can be saved to your personal computer.

First, visit www.SpyNetHQ.com and download the SpyNet™ HQ Client Application from the home page. Once installed, use the application to upload files from the pen by removing the pen cap and plugging the hidden USB key into the computer.
For more FAQ's please visit www.SpyNetHQ.com/faq

3D SPY CARD

■ Unlock secret content with augmented reality technology.

MINIMUM OPERATING SPECS

High Speed Internet Access and USB or built-in Web Camera (640x480 or 320x240)

PC
- IE 6, or Firefox 2.0
- Windows Vista/XP
- 1 GB Ram
- Pentium 4 Processor
- Audio Card for Sound

MAC
- Safari 2.0
- Tiger or later (Leopard/Snow Leopard)
- 1 GB Ram

TO USE YOUR 3D SPY CARDS

1) Click on the **3D Cards** tab on the SpyNet™ HQ Website (www.SpyNetHQ.com).
2) On the 3D Cards page, select your card's toy icon from the list.
3) After the page loads, you should see the camera view from your webcam onscreen.
4) Hold your 3D Spy Card up about 6-12 inches (15-30 centimeters) from your webcam, making sure that the entire face of the card can be seen onscreen.
5) You'll then see a 3D model of your toy appear onscreen. Cover the i button with your finger to have information windows about the toy pop up onscreen. Cover the ↻ button with your finger to cycle to another 3D toy model.

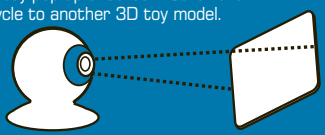

HOLD 3D SPY CARD APPROXIMATELY ~ 6-12 INCHES/15-30 CENTIMETERS FROM WEBCAM

IMPORTANT SAFETY INFORMATION BATTERY WARNINGS AND PROPER USE

⚠ **WARNING:** Battery acid leakage can cause personal injury and cause damage to the product and surrounding property. If battery leakage occurs, thoroughly wash any affected skin, making sure to keep battery acid away from eyes, ears, nose and mouth. Immediately wash any clothing or other surface that comes into contact with leaked battery acid. Leaking batteries may make "popping" sounds. Dispose according to Local, State and Federal Laws.

TO AVOID BATTERY PROBLEMS:
Do not mix old and new batteries.
Do not use rechargeable batteries.
Never mix alkaline, standard (Carbon-Zinc) and rechargeable (Nickel-Cadmium) batteries.
Only batteries of the same or equivalent type as recommended are to be used.
Batteries are to be inserted with the correct polarity.
Exhausted batteries are to be removed from the toy.
The supply terminals are not to be short-circuited.
Different types of batteries or new and used batteries are not to be mixed.
Non-rechargeable batteries are not to be recharged.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

< Reorient or relocate the receiving antenna.
< Increase the separation between the equipment and receiver.
< Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
< Consult the dealer or an experienced radio / TV technician for help.

JAKKS Pacific® Battery, Solar or Electrically-Operated Product 90 DAY LIMITED WARRANTY

Thanks for purchasing a great JAKKS Pacific® product!
Please immediately register your product online at www.jakks.com/warranty.
Registration is not required for the effectiveness of this limited warranty.

IMPORTANT NOTICE TO CONSUMER:
This 90 DAY LIMITED WARRANTY applies to the original product purchaser, provided the product: 1) was purchased from an authorized JAKKS™ distributor/dealer/retailer, and 2) is returned at your expense, postage pre-paid and insured, along with the original dated sales receipt to the address noted below. Please save a copy of your original sales receipt, as the original receipt will not be returned to you. If you return the product to us without the original dated sales receipt, this warranty coverage will not apply. If the product is determined by JAKKS to be defective and returned to JAKKS within the 90 day warranty period, we will (at our option) repair or replace it. Return shipment to you may take up to 6 weeks, depending upon your location. If your product is repaired or replaced, it will be warranted for the longer of the original warranty or for 30 days after warranty service.
SCOPE OF LIMITED WARRANTY: The product is warranted to be: a) tested and inspected before shipment, and b) free of defects in material and workmanship for 90 days from date of purchase. If a covered defect occurs within the warranty period, then at our sole option, we will repair or replace the product or provide you with another product of equal value.
WHAT IS NOT COVERED BY LIMITED WARRANTY: THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN MODIFIED OR REPAIRED BY USER OR OTHERS OR IF IT HAS BEEN DAMAGED AS A RESULT OF ACCIDENT, IMMERSION IN WATER, NEGLECT, ABUSE, MISUSE, BATTERY LEAKAGE, IMPROPER BATTERY INSTALLATION, UNAUTHORIZED SERVICE, LOSS OF PARTS, WEATHER, ACTS OF GOD, ANY ACTION OR OMISSION WHICH CONSTITUTES A DEVIATION FROM THE OPERATING INSTRUCTIONS, OR ANY OTHER CAUSES NOT ARISING OUT OF DEFECTS IN WORKMANSHIP OR MATERIALS. EXCLUSIONS FROM LIMITED WARRANTY: THIS WARRANTY IS EXCLUSIVE OF AND IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES RELATED TO THIS PRODUCT, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARISING FROM POSSESSION, USE, OR MALFUNCTION OF THIS PRODUCT ARE EXCLUDED BOTH FOR PROPERTY DAMAGE AND PERSONAL INJURY TO THE EXTENT LEGALLY PERMITTED.
ADDITIONAL LEGAL RIGHTS: This warranty provides specific legal rights. You may have other or different rights in your state or country.
QUESTIONS OR COMMENTS: If you experience product difficulties or have questions or comments, you may contact our Consumer Relations department as follows:
Phone: 877-875-2557 (toll-free, North America only) or 909-594-7771 x560 (Monday- Friday, 7:30AM-4:30PM Pacific/GMT -8).
Mail: JAKKS Consumer Relations, 21749 Baker Parkway, Walnut, California USA 91789. Email: consumers@jakks.com
WHEN WRITING TO US: Please include: 1) product name; 2) item number; 3) purchase date; 4) description of the problem being experienced; and 5) your name, address and phone number. Additionally, if eligible under the warranty and so advised by JAKKS Consumer Relations, also include the defective product and the ORIGINAL dated sales receipt evidencing product purchase. Please retain a copy of your receipt.

080309

TM & © 2010 JAKKS Pacific, Inc., Malibu, CA 90265 USA.
JAKKS Pacific UK Ltd, Ascot, Berkshire SL5 9ED U.K.
MADE IN CHINA.
Contents may vary in style, color, shape and decoration from images shown on package or in advertising. Questions or comments? www.jakks.com, consumers@jakks.com, 1-877-875-2557 in North America, or 01344 638909 in the United Kingdom.

www.JAKKS.com
JAKKS Pacific